



# VIBRATORY TUMBLER PARTS CLEANER 5LB

MODEL No: **SB948.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instruction  
manual



Wear ear  
protection



Wear eye  
protection



Wear a mask

## 1. SAFETY

### 1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
  - Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
  - DO NOT** use worn or damaged cables, plugs or connectors.
  - ✓ Ensure that any faulty item is repaired or is replaced immediately by a qualified technician.
  - ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
  - ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- IMPORTANT:** Ensure that the voltage rating on the appliance suits the power supply.
- \* **DO NOT** pull or carry the appliance by the power cable.
- \* **DO NOT** pull the plug from the socket by the cable.
- WARNING!** If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.

### 1.2. GENERAL SAFETY

- 1.2.1. Save this manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagrams. Keep your invoice with this manual. Keep the manual and invoice in a safe and dry place for future reference.
- ✓ Familiarise yourself with the application and limitations of the product, as well as the specific hazards.
- WARNING!** Isolate the product from the electrical supply before servicing or performing any maintenance.
- ✓ Maintain the product in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate and fix the product in a suitable work area. **DO NOT** position in direct sunlight, or in areas of extreme heat or cold.
- ✓ Keep children and unauthorised persons away from the work area.
- \* **DO NOT** use the product for any purpose other than that for which it is designed.
- \* **DO NOT** operate the product when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use, switch off and unplug from the electrical supply.
- WARNING! DO NOT** dismantle the product, to do so may result in damage to the product and/or personal injury and will invalidate the warranty. Internal maintenance, which will require the opening of the casing, must only be undertaken by an authorised service agent.
- ✓ Keep work area clean. Cluttered areas invite injuries.
- ✓ Observe work area conditions. **DO NOT** use machines or power tools in damp or wet locations. Don't expose to rain. Keep work area well lit. **DO NOT** use electrically powered tools in the presence of flammable gases or liquids.
- ✓ Keep children away. Children must never be allowed in the work area. **DO NOT** let them handle machines, tools, or extension cords.
- ✓ Store idle equipment. When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep out of reach of children.
- \* **DO NOT** force tool. It will do the job better and more safely at the rate for which it was intended. **DO NOT** use inappropriate attachments in an attempt to exceed the tool capacity.
- ✓ Use the right tool for the job. **DO NOT** attempt to force a small tool or attachment to do the work of a larger industrial tool. **DO NOT** modify this tool and **DO NOT** use this tool for a purpose for which it was not intended.
- ✓ Dress properly. **DO NOT** wear loose clothing or jewellery as they can be caught in moving parts. Protective, electrically non-conductive clothes and non-skid footwear are recommended when working. Wear restrictive hair covering to contain long hair.
- ✓ Use eye and ear protection. Always wear ANSI approved impact safety goggles. Wear a full face shield if you are producing metal filings or wood chips. Wear an ANSI approved dust mask or respirator when working around metal, wood, and chemical dusts and mists.
- ✓ Avoid unintentional starting. Be sure the switch is in the Off position when not in use and before plugging in.
- ✓ Stay alert. Watch what you are doing, use common sense. **DO NOT** operate any tool when you are tired.
- ✓ Check for damaged parts. Before using any tool, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment and binding of moving parts; any broken parts or mounting fixtures; and any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician. **DO NOT** use the tool if any switch does not turn on and off properly.

- ✓ Guard against electric shock. Prevent body contact with grounded surfaces.
  - ✓ Replacement parts and accessories. When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this tool.
  - ✗ **DO NOT** operate tool if under the influence of alcohol or drugs. Read warning labels if taking prescription medicine to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, **DO NOT** operate the tool.
- 1.2.2. MAINTENANCE.** For your safety, service and maintenance should be performed regularly by a qualified technician.
- NOTE:** Performance of this tool may vary depending on variations in local line voltage.
- ✓ Extension cord usage may also affect tool performance.
  - **WARNING!** The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
  - ✗ **DO NOT** use ceramic, wet or water based media in tumbler. Use only plastic beads, ground corn cobs, walnut shells, etc.
  - ✗ **DO NOT** use to polish stones. A rotary tumbler (such as Rotary Rock Tumbler or Dual Drum Rotary Rock Tumbler) and water-mixed media is required for polishing stones.
  - ✗ **DO NOT** exceed 5lb tank capacity.
  - ✗ **DO NOT** use without top lid in place. Hazardous dust may be created and media and/or work materials may be ejected.
  - ✗ **DO NOT** remove top lid immediately after use. Wait at least 1 hour after tumbling is complete before opening top lid. This will allow dust to settle.
  - ✗ **DO NOT** place items on the top lid during use.
  - ✓ Stay alert, watch what you are doing and use common sense when operating a power tool.
  - ✓ Industrial applications must follow OSHA guidelines.
  - ✓ Maintain labels and nameplates on the tool. These carry important safety information.
  - ✓ Avoid unintentional starting. Prepare to begin work before turning on the tool.
  - ✓ People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.

## 2. INTRODUCTION

Vibratory tumbler suitable for surface cleaning and polishing, rust removal and deburring, providing quick and effective results. Small Vibratory Tumbler is for dry use only. Allows for efficient cleaning and polishing of various small metal objects and other items with the assistance of cleaning medias. Features a polymer bowl designed to withstand rigorous use and ensure longevity.

## 3. SPECIFICATION

Model No:	<b>SB948.V2</b>
Bowl Capacity:	2.2kg
Bowl Opening Size:	Ø200mm
Nett Weight:	4.2kg
Supply:	230V/50Hz



## 4. OPERATION

### 4.1. CHOOSING A MEDIA

4.1.1. The media used in standard tumblers is generally not suitable for vibratory machines. Any media that is run wet is NOT suitable for this tumbler.

Vibratory tumblers often use dry media that is too light to be effective in standard tumblers. Steel and ceramic media, generally used in tumbling, may also be used in heavy duty vibratory machines.

There is a wide variety of media to be used in vibratory finishing. The chart below outlines the recommended media for this tumbler.

Name	Application	Feature
80 Grit Glass Bead Blast Media.	Metal and plastic surfaces.	Non-damaging to soft metals like aluminum.
220 Grit Aluminum Oxide Abrasive.	Cleaning, finishing and deburring.	Removes rust, corrosion and paint.
Coarse Grade Walnut Shell Media.	Cleans aluminum and brass.	Rust-free paint removal; cleans transmissions and engines.
Fine Grade Walnut Shell Media.	Cleans aluminum and brass.	Rust-free paint removal; cleans transmissions and engines.
Rust-Cutting Resin Abrasive Media.	Metal bolts and nuts.	Removes rust from bolts and nuts without damaging threads.
30-40 Grit Plastic Abrasive Media.	Aluminum, chrome, antiques and aluminum aircraft.	Fast removal of paint, light oxidation.

**4.2. FOR DEGREASING:** Use corncob, walnut shell or plastic media, tumble for 30 minutes to 1 hour.

**4.3. TO REMOVE RUST:** Use plastic media, depending on the condition of the materials, tumble for 2 - 6 hours.

**4.4. TO POLISH:** Tumble in walnut shell or corncob media. **DO NOT** add water. Add a small amount of commercial metal polish. **NOTE:** Plastic beads are usually used with a powdered abrasive added. **CAUTION!** Walnut shells can create an oil during use, which can lead to slight discolouring of object.

### 4.5. WORKPIECE AND WORK AREA SET UP

4.5.1. Designate a work area that is clean and well-lit. The work area must not allow access by children or pets to prevent distraction and injury.

4.5.2. Route the power cord along a safe route to reach the work area without creating a tripping hazard or exposing the power cord to possible damage. The power cord must reach the work area with enough extra length to allow free movement while working.

#### 4.6. GENERAL OPERATING INSTRUCTIONS

**NOTE:** Use this tumbler for the following finishing applications:

- 4.6.1. Removing rust or other surface imperfections from hardware.
- 4.6.2. Removing burrs from machined or stamped hardware or other small parts.
- 4.6.3. Polishing small parts.
- 4.6.4. Removing any contaminants from various metal parts.
- 4.6.5. Make sure Tank interior is dry before each use.
- 4.6.6. Fill the tumbler bowl about 2/3 full with polishing media. Add metal parts as needed up to a maximum of 5lbs of material (including media). **DO NOT** overfill. Overfilling will cause the polishing process to go much slower. If the tumbler is running too slowly, remove some items and restart the machine.
- 4.6.7. Place the top lid on the vibratory bowl, make sure that the protect tube is correctly in place. Add the rubber pad and washer and finger-tighten using the wing nut.
- 4.6.8. Connect power cord to the nearest mains supply and press the switch on the tumbler to the "ON" position.
  - ▲ **CAUTION! DO NOT** place any items on the top lid while the tumbler is operating.
  - ▲ **CAUTION!** Never tumble with the top lid off, as hazardous dust may be created, and the media or work materials may be ejected from the tumbler.
- 4.6.9. When the tumbling is completed, press the power switch to the OFF("O") position before opening the tumbler.
- 4.6.10. To prevent accidents, turn off the tumbler and disconnect its power supply after use. Clean, then store the tumbler indoors out of children's reach.

### 5. MAINTENANCE

- **WARNING!** Procedures not specifically explained in this manual must be performed only by a qualified technician.
  - NOTE:** For additional information regarding the parts listed in the following pages, refer to the parts diagram.
- **WARNING!** Disconnect from mains before attempting any maintenance work.
- 5.1. **TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: DO NOT** use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.
- 5.2. **CLEANING, MAINTENANCE, AND LUBRICATION**
  - 5.2.1. **BEFORE EACH USE,** inspect the general condition of the tumbler. Check for:
    - 5.2.2. Loose hardware.
    - 5.2.3. Misalignment or binding of moving parts.
    - 5.2.4. Cracked or broken parts.
    - 5.2.5. Damaged electrical wiring, and any other condition that may affect its safe operation.
    - 5.2.6. Check that the rubber washer is in good condition and in place. Replace if damaged.
    - 5.2.7. The rubber feet at the bottom of the base may eventually wear out. Inspect these periodically. If worn, replace.
    - 5.2.8. Protect the motor from water and moisture.
    - 5.2.9. Store tumbler in a dry location and out of the reach of children when not in use.
    - 5.2.10. After use, wipe external surfaces of the tumbler with a clean cloth.

### 6. TROUBLESHOOTING

Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

PROBLEM	POSSIBLE CAUSES	LIKELY SOLUTIONS
Tool will not start.	<ol style="list-style-type: none"> <li>1. Cord not connected.</li> <li>2. No power at outlet.</li> <li>3. Tool's thermal reset breaker tripped (if equipped).</li> <li>4. Internal damage or wear. (Carbon brushes or switch, for example).</li> </ol>	<ol style="list-style-type: none"> <li>1. Check that cord is plugged in.</li> <li>2. Check power at outlet. If outlet is unpowered, turn off tool and check circuit breaker. If breaker is tripped, make sure circuit is right capacity for tool and circuit has no other loads.</li> <li>3. Turn off tool and allow to cool. Press Reset button on tool.</li> <li>4. Have technician service tool.</li> </ol>
Tool operates slowly.	<ol style="list-style-type: none"> <li>1. Extension cord too long or wire size too small.</li> </ol>	<ol style="list-style-type: none"> <li>1. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load.</li> </ol>
Performance decreases over time.	<ol style="list-style-type: none"> <li>1. Accessory dull or damaged.</li> <li>2. Carbon brushes worn or damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Keep cutting accessories sharp. Replace as needed.</li> <li>2. Have qualified technician replace brushes.</li> </ol>
Excessive noise or rattling.	<ol style="list-style-type: none"> <li>1. Internal damage or wear. (Carbon brushes or bearings, for example).</li> </ol>	<ol style="list-style-type: none"> <li>1. Have technician service tool.</li> </ol>
Overheating.	<ol style="list-style-type: none"> <li>1. Forcing machine to work too fast.</li> <li>2. Blocked motor housing vents.</li> <li>3. Motor being strained by long or small diameter extension cord.</li> </ol>	<ol style="list-style-type: none"> <li>1. Allow machine to work at its own rate.</li> <li>2. Wear ANS I-approved safety goggles and NIOSH-approved dust mask/respirator while blowing dust out of motor using compressed air.</li> <li>3. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load.</li> </ol>



#### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

**Tel:** 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk